

PRO ARMOR

EVERY RIDE HAS A STORY




CONTENTS:
1- DOOR BAGS WITH STORAGE (2)

HONDA TALON - DOOR PADS

HONDA TALON DOOR PAD INSTRUCTIONS (H191Y330)

NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on proarmor.com.

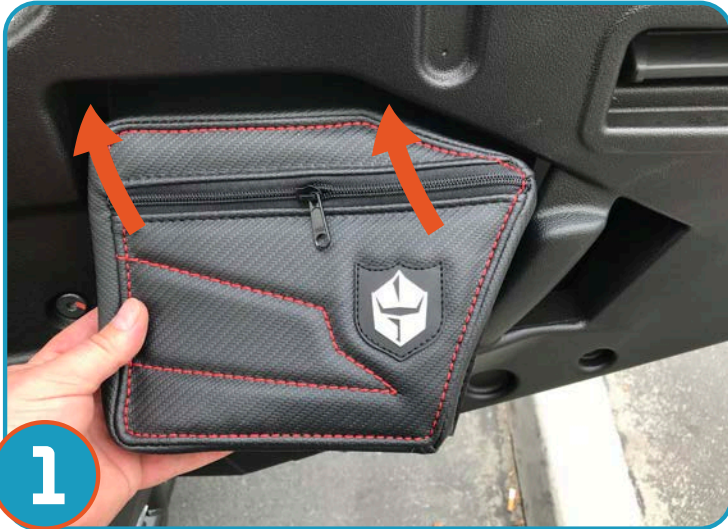

Remove velcro® strip on back of door pad and place door bag into door cavity inserting top backing at an angle. Door bag will then fall into place. Press firmly on bag to adhere velcro strip to door panel.



Repeat for opposite door.



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.

⚠ WARNING

• **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.

Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.